



For Android

How to activate an eSIM on your phone

Method 1

QR Code Setup page 2

Method 2


Manual Setup page 8

*The screen display can differ based on the device and OS version.




QR Code Setup

Android - QR Code Setup

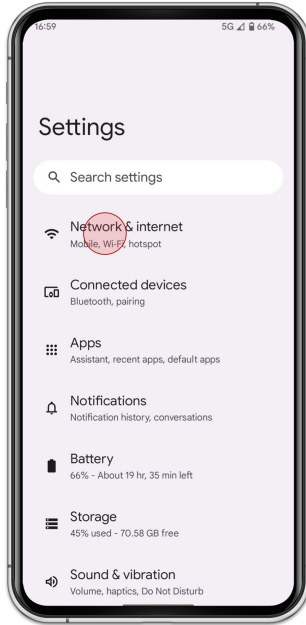


1. Go to [**Settings**] and tap [**Network & internet**]

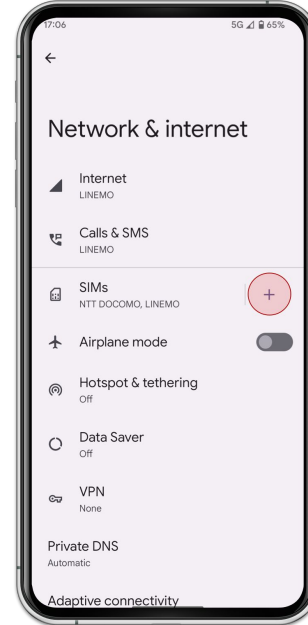


2. Tap [**SIMs**]

Android - QR Code Setup

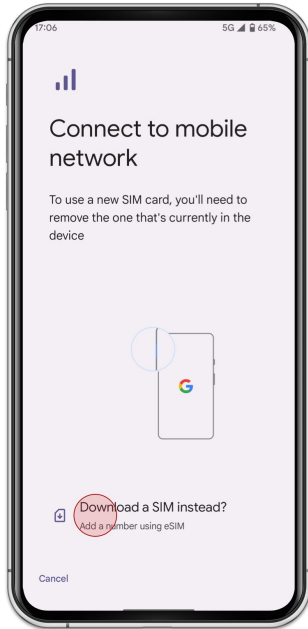


3. Tap [**Download a SIM instead?**]

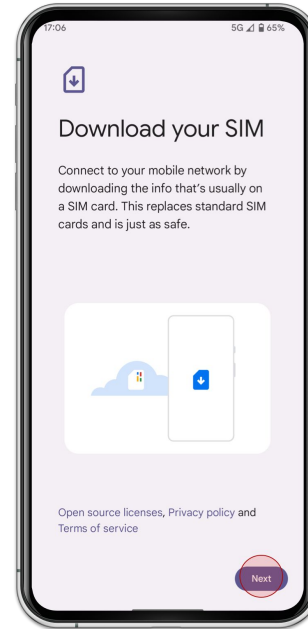


4. Tap [**Next**]

Android - QR Code Setup

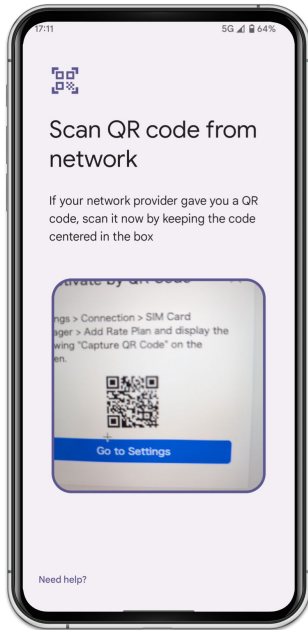


5. Scan your QR Code of your order

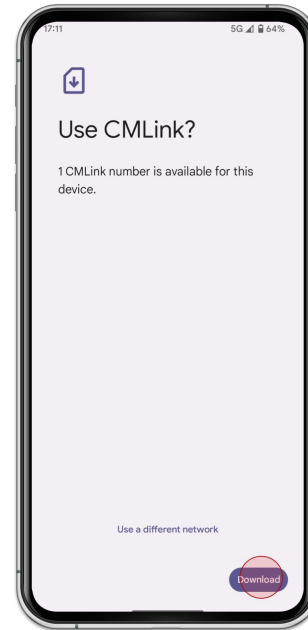


6. Tap [**Download**]

Android - QR Code Setup

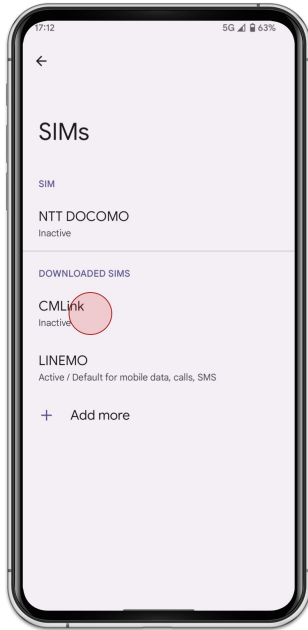


7. Select the eSIM you added

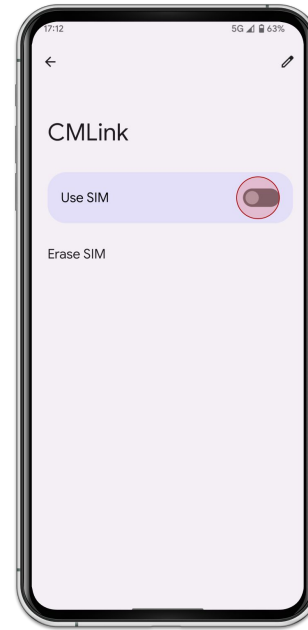


8. Turn on [**Use SIM**]

Android - QR Code Setup

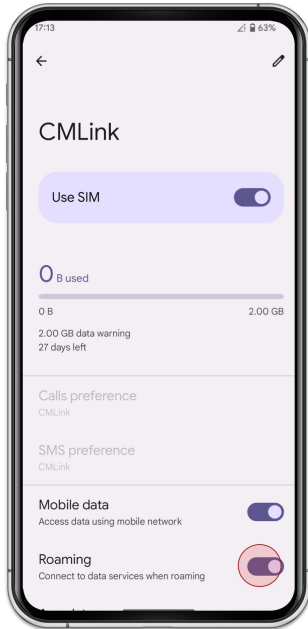


9. Turn on [**Roaming**]

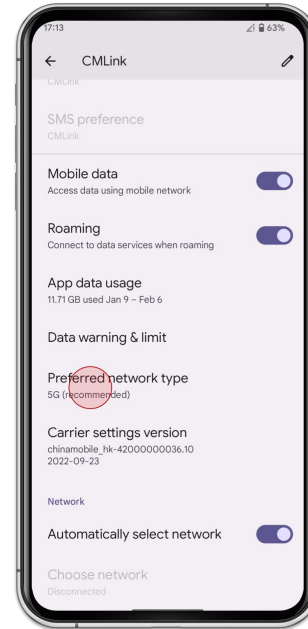


10. Tap [**Preferred network type**] and select [**LTE**]

Manual Setup (SM-DP+)

Android - Manual Setup

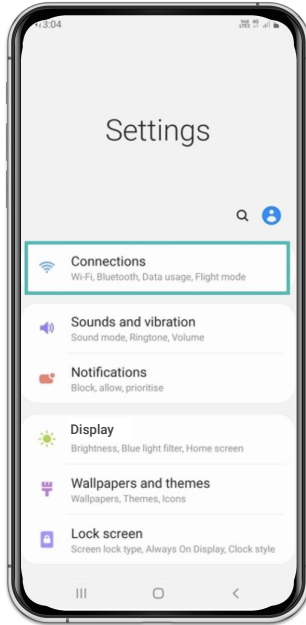


1. Go to [**Settings**] and tap [**Connections**]

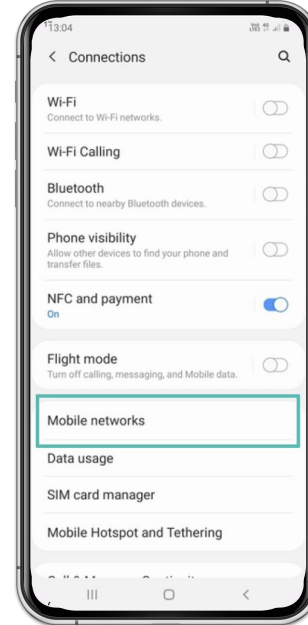

2. Tap [**Mobile networks**]

Android - Manual Setup

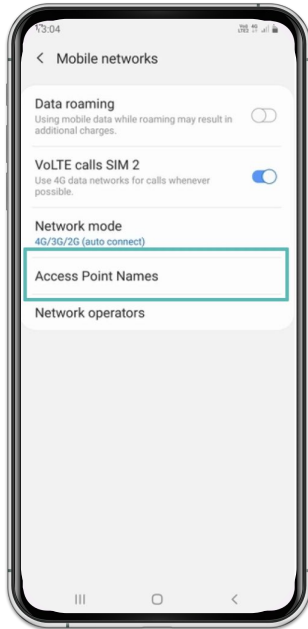


3. Tap [**Access Point Names**]




4. Tap [**Add**]

Android - Manual Setup

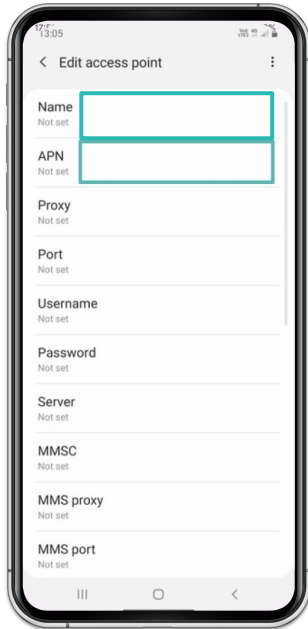


5. Enter [**m-air.jp**] for Name & APN

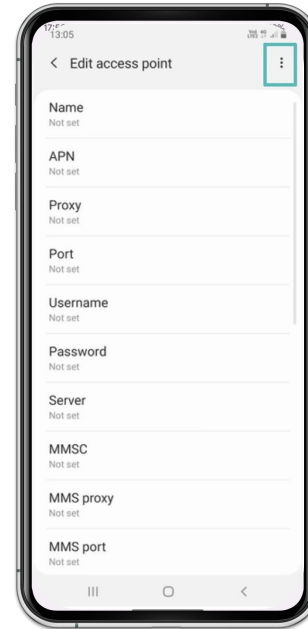


6. Tap [**top right icon**]

Android - Manual Setup

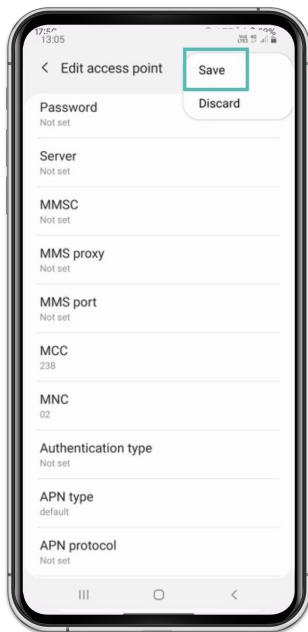

7. Tap [Save]

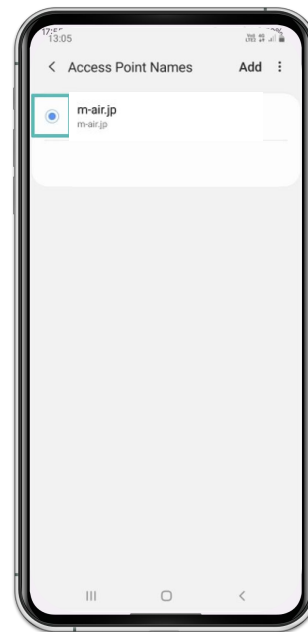

8. Select [m-air.jp]

Note at end

If the connectivity does not work properly even after correct setting, please reboot your device.